



Mobibooth® Aura Models 9/10/12 Setup Guide For V1/V2/V3

Technical Support
support@mobibooth.co


800-731-6485

Hours: 9-5 EST M-F

Table of Contents

| | |
|--|----------|
| Step 1: Watch Setup Video | 3 |
| Step 2: Written Assembly Procedure | 4 |
| 1. Tool and accessories | 4 |
| 2. Assembly Instructions | 5 |
| Step 1: Unpack parts | 5 |
| Step 2: Attach baseplate | 6 |
| Step 3: Power cord and rotate | 7 |
| Step 4: Connect power interconnects between extrusions | 9 |
| Step 5: Install the top extrusion | 10 |
| Step 6: Install four extrusion bolts | 11 |
| Step 7: Attach head assembly | 12 |
| Step 8: Secure the head assembly | 14 |
| Step 9: Connect power cord interconnects | 15 |
| Step 10: Power unit | 16 |

Step 1: Watch Setup Video

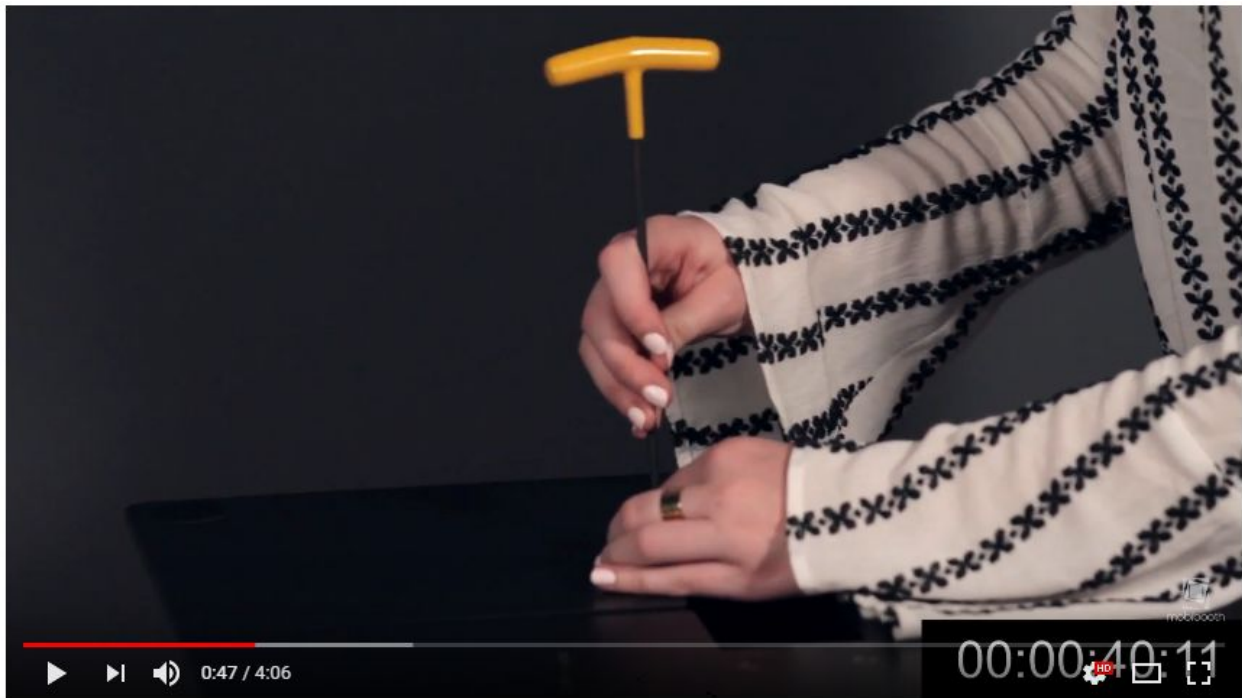

Watch the setup video at https://youtu.be/k_pSC6B1IHQ

In this video we cover:

- What parts are included with your photo booth.
- How to attach the base plate.
- How to stack and secure vertical extrusions.
- How to connect power wiring interconnects.
- How to attach the head assembly.

Step 2: Written Assembly Procedure

1. Tool and accessories

Tools and accessories stored in the bottom extrusion include:

- 1x - T-handle tool
- 12x - hex head bolts (2 extras are included)
- 3x - Allen wrench (hex keys) used for repairs only.





2. Assembly Instructions

Step 1: Unpack parts



Unpack case and place sections on floor, taking care to protect finished surfaces from scratches.

Remove accessory parts from the Top Extrusion.

- Head Section
- Top Extrusion
- Bottom Extrusion
- Baseplate

Step 2: Attach baseplate



Attach the baseplate to the bottom extrusion by:

1. Aligning the green dots on extrusion bottom and baseplate's top.
2. Tightening 4 bolts snugly (do not over tighten) using T-handle tool.

Step 3: Power cord and rotate



Pull the power cord from the bottom of the extrusion aligning it to the cord channel in the baseplate (the long slot).



Flip the assembly over so that the baseplate is now on the ground.

Ensure that all electrical plugs are securely installed in the power strips within the lower extrusion.

Pull out the light and iPad power cords.

Step 4: Connect power interconnects between extrusions



Connect the ring light power cord to the power block.
Connect the iPad USB power cords.

Step 5: Install the top extrusion



Insert the top extrusion into the bottom extrusion ensuring all cords are inside and not pinched.

Ensure top extrusion is sitting flush and four bolt holes are aligned.

Step 6: Install four extrusion bolts



Install four bolts into holes snugly to secure top extrusion to bottom extrusion.

Step 7: Attach head assembly



Feed the wiring pigtail through the oval opening in the top of the pivoter.



Attach the head assembly using the two front guide pins to line up the bolt holes.

Step 8: Secure the head assembly



Screw in two bolts at the rear of the head assembly baseplate to secure to the pivoter.

Step 9: Connect power cord interconnects



Push the head assembly forward to maximum forward angle to access the head pigtail and pivoter pigtail. Connect power cable interconnects for light and iPad.

Step 10: Power unit



Plug the extension cord into a 120 VAC / 5 Amp outlet and turn on ring light power by turning rear switch clockwise.

Ideal light setting is usually between $\frac{1}{4}$ and $\frac{1}{2}$ power depending on the amount of ambient light in the area.